



RADAR TELEMATICS LTD

Eastern Bypass Greyville Business park 6th floor wing B

Phone: 0793677500/0793548987 Email: info@radartelematics.co.ke

REF: RTL/23-0078

Redview RT1001 User Manual

1. The speed governor is set to **limit speed 80km/h**.
2. Tamper Protection Mode (disconnect signal wire / power wire, vehicle goes into limp model). In **limp model**, the vehicle will **be limited to at 50km/h**
3. Speed record **on board and off board** (Date & Time, Speed, Highest speed, Violation).
4. Limiter device is resistant to reverse polarity connections.
5. **Pre-warning** alarm occurs at **75km/h** prior to the set speed and continue buzzing once the speed limit is achieved and exceeded.
6. **Real time tracking** through web tracking platform and cell phone app.

The mobile App can be downloaded using the link below

<https://play.google.com/store/apps/details?id=com.H5705DC87.radartelematics&hl=en>

user: NUMBERPLATE

password: Track@123

7. Limiter device upload the data at not more than 10seconds interval but normally set at 5 sec intervals

The **vehicle speed records** and **Violations** can be retrieved by the regulatory authorities via the web link below

<http://tracking.radartelematics.co.ke/auth.aspx>

username: mvi123

password: ntsa

8. Limiter device can store the data in a non-erasable memory for at least 72 hours even if the power supply is disconnected.
9. Portable printing is supported for 1hour / highest speed / violation records.